
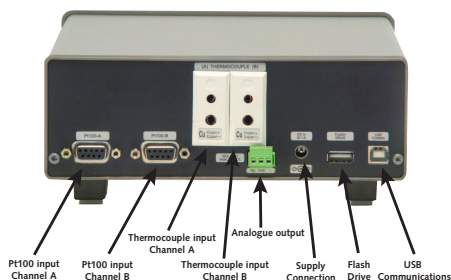


# Tempmaster PRO and Labcal PRO High Precision Digital Thermometer

## Getting Started

The Labcal and Tempmaster Pro are high precision digital thermometers with logging functions. They can be used as 'stand-alone' instruments or with a PC via the software provided.

1. Plug the output lead from the supply adaptor into the ac supply (110 to 240V). Press 'POWER' to switch on. The display will indicate data relating to the channel last selected prior to switch off.

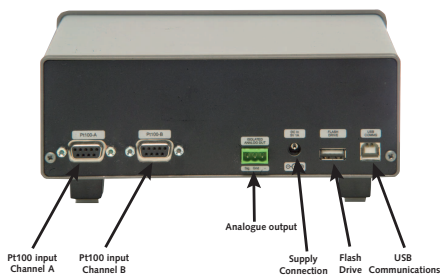

2. Connect the required sensors to the appropriate inputs.
3. For communications with a PC (optional), load the PC software supplied on to the PC. Then connect the USB cable supplied between the PC USB port and the instrument.



4. Operation requires the selection of appropriate menus which are shown on the display screen; refer to the user manual for details. To read a sensor temperature directly, press 'SENSOR' to select the required type of sensor if different to that currently indicated. Brief repeated key presses will step through the various types, or holding the key will auto-repeat (scroll through); this applies to other functions as well.

Press 'CHANNEL' to select inputs and press 'UNITS' to display the desired units of measurement.

5. The instruments can be controlled from the PC software which also allows the setting up of scanning and logging functions.